

# Spin 'N' Win™ Prize Wheel Kit

**Congratulations on the purchase of your Spin 'N' Win™ Prize Wheel Kit.**

 
 
 
 
 
## Owner's Manual

- Includes:
- Parts List
- Assembly Instructions
- Disassembly Instructions
- Storage Instructions
- Care Instructions
- Warranty Information

Please read all of the information carefully and contact your distributor or supplier with any issues.



## Parts List

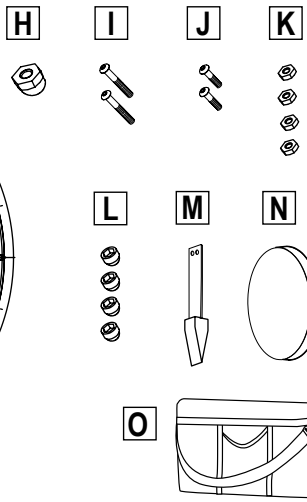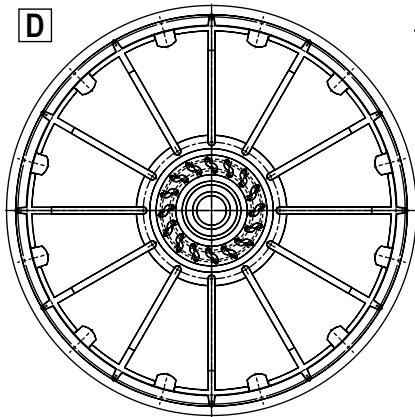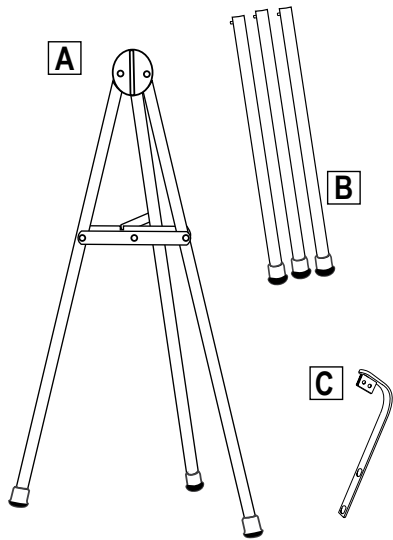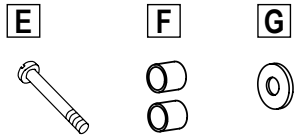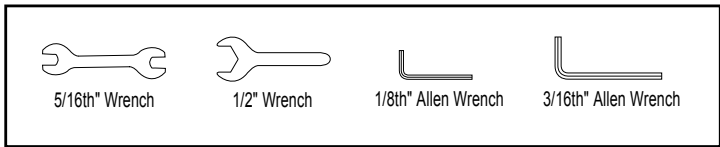


- A** - Stand
- B** - Extension Legs (3)
- C** - Pointer Arm
- D** - Wheel
- E** - 3-1/2" Wheel Bolt
- F** - 1/2" Wheel Spacers (2)
- G** - Wheel Washer
- H** - 5/16" Wheel Nut
- I** - 1/2" Arm Bolts (2)
- J** - 3/8" Pointer Bolts (2)
- K** - Small Nuts (4)
- L** - Small Endcaps (4)
- M** - Pointer
- N** - Magnetic Center Cover
- O** - Soft Carry Case  
(case not to scale)

# Assembly Instructions
 
## EXTENSION LEGS

(1) Remove **Rubber Feet** from the three **Stand Legs** and place them on the three **Extension Legs** (on opposite ends from the Pins).

(2) Insert **Extension Legs** into the **Stand Legs** by pressing in each **Pin** and rotating to secure it through the hole on each **Stand Leg**.

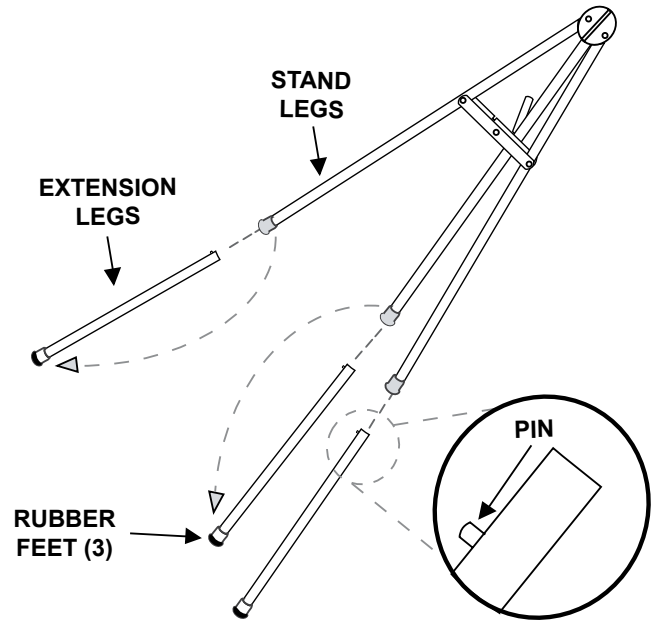


## THE STAND

(1) Set the **Stand** upright on its **Rubber Feet** (with or without **Extension Legs**, depending on model).

(2) Free the **Support Arm** and latch it securely into the slot on the **Crossbar**.

 (3) Attach the **Pointer Arm** to the **Arm Plate** (on the **Stand**) using the two **1/2" Arm Bolts** and two of the **Small Nuts**. Position the **Pointer Arm** (with the curved end up, facing front) against the **Arm Plate**. Line up the top and bottom holes and insert the **Arm Bolts** through the front of the **Pointer Arm** and **Arm Plate**. Screw the **Small Nuts** onto the back of the **Arm Bolts** and tighten with the **5/16" Wrench** and **1/8" Allen Wrench**. The **Small Nuts** can be covered with two **Small End Caps**.

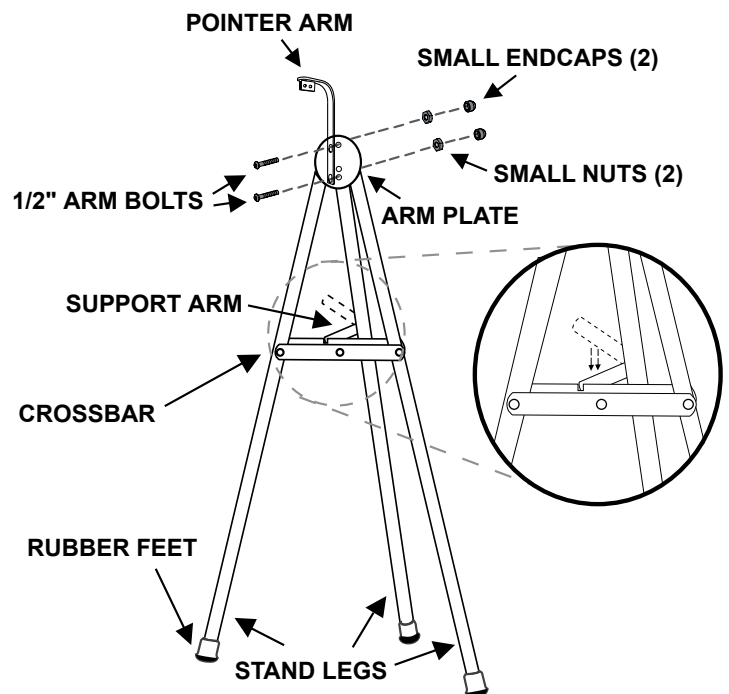

## Assembly Instructions (cont.)

### THE WHEEL, POINTER AND GRAPHICS

(1) Unpack the **Wheel**, remove any cardboard and insert the **3-1/2" Wheel Bolt** all the way through the center of the front.

 
 
(2) Slide the two **1/2" Wheel Spacers** onto the **Wheel Bolt** and mount the **Wheel** on the **Stand** by inserting the **Wheel Bolt** through both holes of the **Crossbar**. Secure the **Wheel Bolt** with the **Wheel Washer** and **5/16" Wheel Nut** and tighten with the **1/2" Wrench** and **3/16" Allen Wrench**. The **Wheel** should spin smoothly.

(3) Attach the **Pointer** between the slots of the **Pointer Arm** by lining up the holes and securing with the two **3/8" Pointer Bolts** and two **Small Nuts**. Tighten with the **1/8" Allen Wrench** and the **5/16" Wrench**. The **Small Nuts** can be covered with the **Small End Caps**.

(4) Attach the **Magnetic Center Cover** to the front end of the **Wheel Bolt**.

(5) Insert **Prize Pieces** into the wheel slots.

(6) Start spinning!

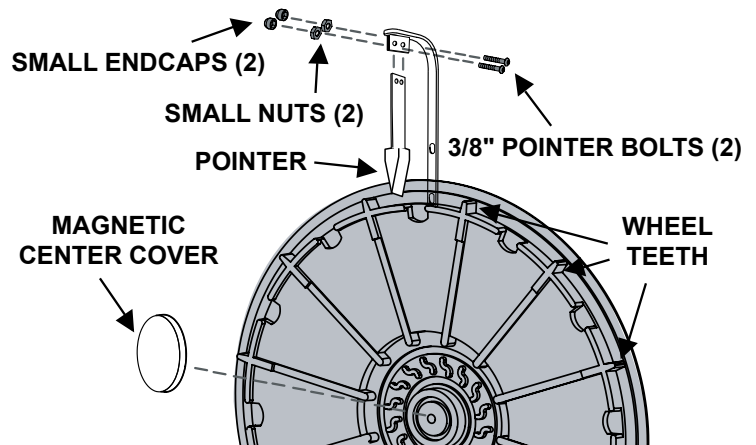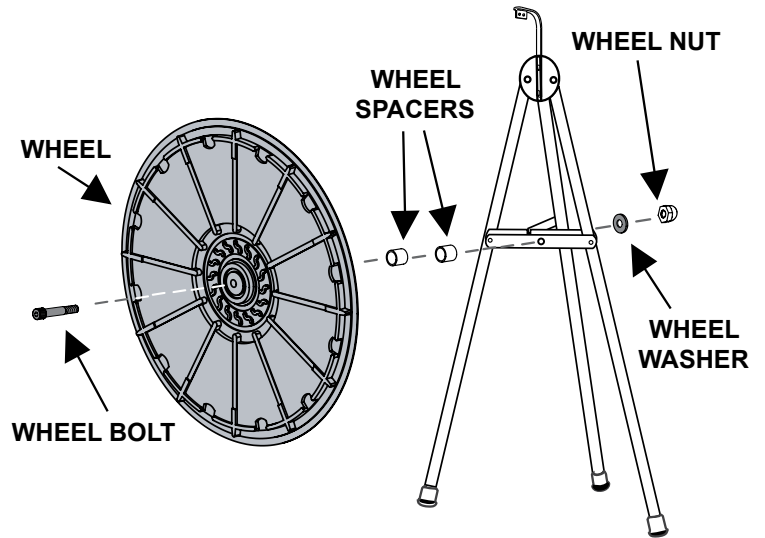

## Storage Instructions

Store all parts in carry case (O) and place in a cool dry environment.

## Care Instructions

Clean hardware with a damp cloth and wipe dry. Clean graphics with dry cloth.

## Warranty Information

All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.