 
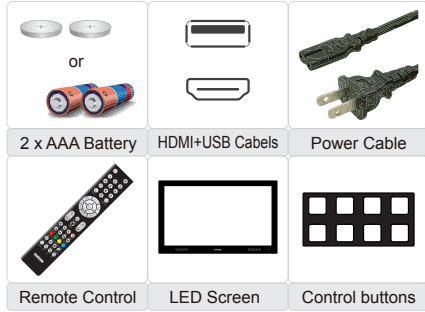 


**Contents**

Included items:

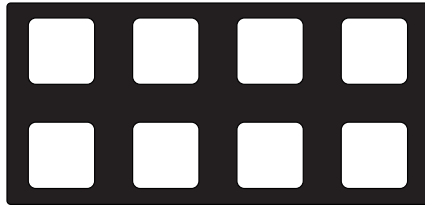 


Conn. B      Conn. A


**Inputs**

- 1. AV**  
Input for audio/video sources  
*\*Component and AV shares the same audio input*
- 2. YpBpR**  
Input for component sources (YpBpR)
- 3. Headphone**  
Output for headphone devices
- 4. Conn. B**  
Input for Conn. B from control buttons
- 5. Conn. A**  
Input for Conn. A from control buttons
- 5. CI-Module**  
Input for CA-module (card reader)
- 6. Power Input**  
Input for 100-240 V power
- 7. USB**  
Input for USB Media Player
- 8. HDMI1**  
Input 1 for HDMI sources
- 9. HDMI2**  
Input 2 for HDMI sources
- 10. HDMI3**  
Input 3 for HDMI sources
- 8. Power Input**  
Input for 100-240 V power
- 9. USB**  
Input for USB Media Player
- 11. PC**  
Input for PC or VGA sources
- 12. PC Audio**  
Input for PC audio when PC input is connected
- 13. Coaxial**  
Output for digital audio signal (coaxial)

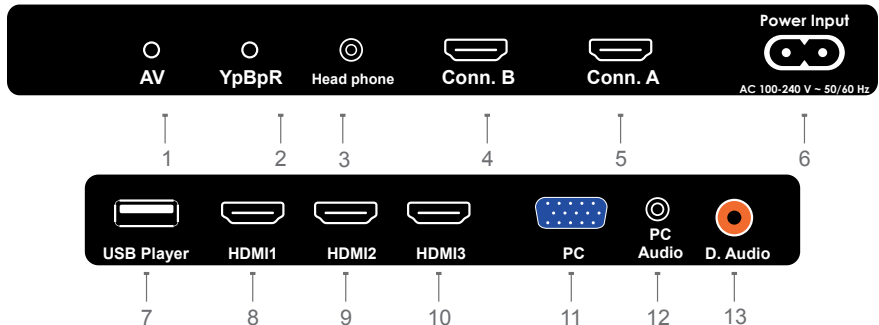

**Remote control buttons**

 - |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1. On/Off button</li> <li>2. Number buttons for direct channel access</li> <li>3. Display additional information</li> <li>4. List TV-channels</li> <li>5. EPG (Electronic Program Guide)</li> <li>6. Navigation button <i>UP</i></li> <li>7. Navigation/adjust button <i>LEFT</i></li> <li>8. Menu display. In OSD sub-menu press to access previous menu</li> <li>9. Available sources selection</li> <li>10. Picture freeze</li> <li>11. Volume increase</li> <li>12. Volume decrease</li> <li>13. Enter sleep mode in certain chosen time</li> <li>14. Start/Pause play, Start/Paus time shift/alter Teletext mix</li> <li>15. Stop play/activate Teletext</li> <li>16. Fast forward/Teletext index</li> <li>17. Fast backward/ Teletext cancel</li> <li>18. Fast-text topic selection in Teletext <i>GREEN</i></li> <li>19. Fast-text topic selection in Teletext <i>RED</i></li> <li>20. Choose Audio/ language in DTV/USB media player</li> <li>21. Aspect Ratio selection</li> <li>22. Shortcut to USB</li> <li>23. Shortcut to HDMI1,2,3</li> <li>24. Mute the built-in speakers</li> <li>25. Previous TV channel in DTV/TV</li> <li>26. Display favorite channels list</li> <li>27. Confirm/activate button</li> <li>28. Navigation/adjust button <i>RIGHT</i></li> <li>29. Exit the OSD</li> <li>30. Navigation button <i>DOWN</i></li> </ol> | <ol style="list-style-type: none"> <li>31. Next channel. When the channel list is displayed, it scrolls down to next page in the list</li> <li>32. Previous channel. When the channel list is displayed, it scrolls up to previous page in the list</li> <li>33. Instant Recording/ Teletext size selection</li> <li>34. Display Recorded List/Hold Teletext</li> <li>35. Previous Title/Display time in Teletext</li> <li>36. Next Title and Reveal Teletext</li> <li>37. Fast-text topic selection in Teletext <i>Yellow</i></li> <li>38. Fast-text topic selection in Teletext <i>Blue</i></li> <li>39. Activate subtitles in DTV/USB media player</li> <li>40. Alter TV/Radio Channels mode</li> <li>41. Shortcut to AV</li> <li>42. Shortcut to DTV/TV</li> </ol> |
|--|--|

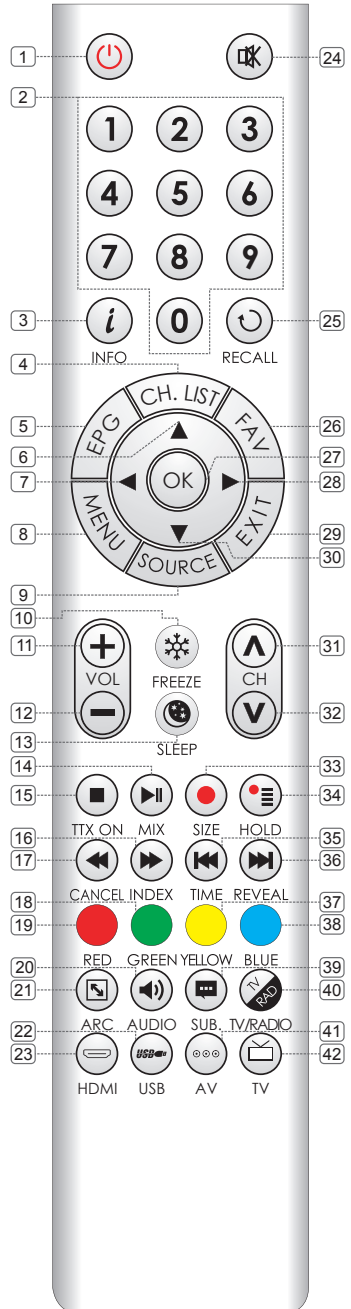

## Main Operations

### Turning On And Off



Press Power button on the remote control or the On/Off button on the control buttons. The product will turn on and will be ready to be used.



### Select Source

Press Source button on the remote control. Then you can see the source list menu shown to the right. Press Navigation Up/down button on the remote control to select the source and confirm by pressing Enter.

Input Source	
DTV	
TV	
SCART	
YPBPR	
PC	
HDMI1	
HDMI2	
HDMI3	
AV	
USB	
↕ Move	☑ Menu
	☑ Quit

## Volume Control

Press VOL+ / VOL- button on the remote control to adjust the volume level. Press MUTE button on the remote control when you need to mute the sound.



## OSD Menu Operation

- Press **MENU** button on the remote control to access the OSD Menu. Pressing the same button again will move you backward in the OSD structure.
- Press **ENTER** button to confirm/select.
- Use **LEFT & RIGHT** buttons to navigate or change the parameters of the current sub-menu.
- Use **UP & DOWN** buttons to navigate in the OSD menu.
- Press **EXIT** button to exit the OSD Menu.



 
## OSD Menu Structure

- **OSD** (On Screen Display) allows users to control or adjust various features and settings in accordance with his/her preferences.
  - Press the **MENU** button on the remote control to see the main OSD menu.



### OSD Menu Operation:

- **Main Menu:** Press the **MENU** button on the remote control to enter the main OSD menu. First, choose Main menu item you need with the buttons ◀ & ▶. To select a Main menu items, just press Enter or Navigation button ▼ on the Remote Control.
- **Sub Menu:** Each menu item has its own sub menu items to set.
- **Sub Menu items:**
  - A:** If there is no value to adjust it means there is a sub menu which you can access by pressing Enter and modify the menu values. Select sub-menu item with ▲ & ▼ buttons on the remote control and press Enter button to enter the submenu or change the value.
  - B:** If there is no ▶ part, the item has adjustable values. Use the ◀ & ▶ buttons to adjust the values.
  - C:** If the sub-menu item is grey colored, it means this item is not available in the particular mode.

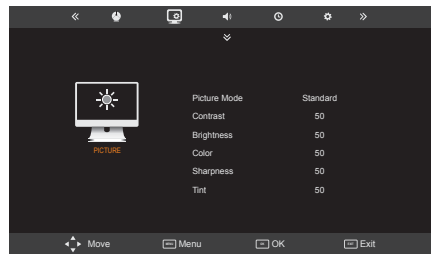

**TV-Stand operations**

1. Create 9 videos files and label it according the list below.

1. The main video file which is displayed and repeated continuously until a control button is interacted should be labelled

**00.\*\*\***

(\*\*\* is the file format which can be AVI, MPG or other supported files, see the supported file list).

The other video files should be labelled as below

**01.\*\*\***

**02.\*\*\***

**03.\*\*\***

**04.\*\*\***

 
**05.\*\*\***

**06.\*\*\***

**07.\*\*\***

**08.\*\*\***

The video files are associated with the control buttons according to the drawing below

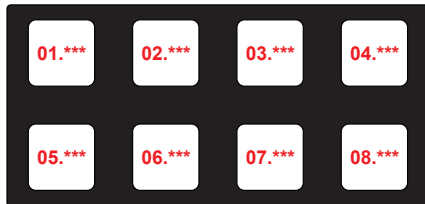


The video files must be copied to the ROOT of an USB Flash Memory.

Connect the USB Flash Memory to the LED Screen USB Input and turn on the LED Screen. TV-Stand will start to display the main file (00.\*\*\*). When a control button is interacted by wave or touch it will display the associated video.

While displaying a video associated to a control button you can PAUSE the displayed video by touching or wave above the associated button. To resume displaying the video touch or wave above the same button again.

To display another video just touch or wave above any control button (it is not necessary to wait until the current video displaying is completed).

## USB Media Player

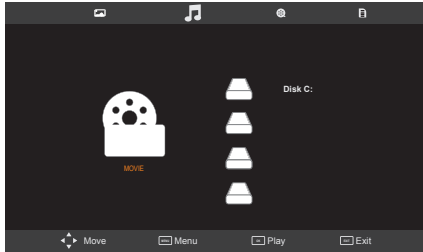 

This product is equipped with high end USB Media Player. It is capable of playing music, movies (up to 1080p and with subtitle support), and display photos or text documents.

To Enter USB mode  
*Press Source*  
*Choose USB*  
*Press Enter*

In USB mode you can choose between:

**Photos:** Enables you to display several formats of photos and images

**Music:** Enables you to play several formats of music and audio files

**Movie:** Enables you to play several formats of movies and video files

**Text:** Enables you to display TXT files

### Remote Control Keys used in USB Mode

The INFO button will display available controllers where it is possible to i.e. rotate an image. The controllers may vary depending on the USB mode.







 
 
 

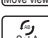 




Navigation Key to navigate in the different position of the menu and press enter to activate the function.

The AUDIO button will alter audio track (if several audio tracks are available in the played file).

The SUB-T button will alter the subtitles or turn it off (if several subtitles languages are available in the played file).

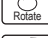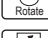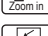The subtitle file should be saved in UNICODE In order to display the correct characters.

## Functions

-  Repeat the file
-  Go to defined time position in the file
-  Repeat the file. Choose between ALWAYS, ONCE or NO REPEAT
-  Play audio files while displaying images
-  Display the Playlist
-  Display current file's information
-  Press to rotate 90 degrees CW
-  Press to rotate 90 degrees CW
-  Press to Zoom IN
-  Press to Zoom OUT
-  Press to MOVE in ZOOM mode
-  Define a part of a video to be repeated
-  Change aspect ratio
-  Play step forward in a video
-  Play slowly forward in a video