

BCL Universal Light CLip

Shown on an Xpressions SalesMate

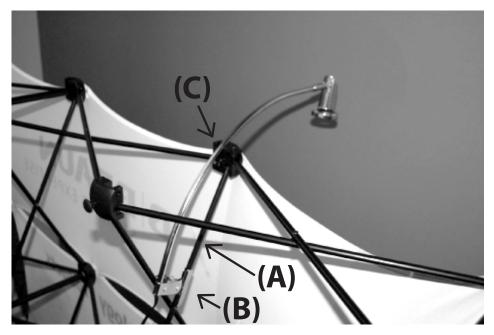

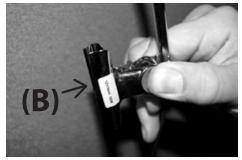



- 1. Unpack your BCL light.
- 2. From the back of the frame find a vertical front scissor bar (A)
- 3. Squeeze the BCL Light base clip (B) to an open position
- 4. Release your squeeze on the the BCL Light base clip (B) so it returns to its closed position clamping onto the round vertical scissor bar (A)
- 5. The arm of the light should rest onto the hub as shown (C)
- 6. Repeat for remaining lights
- 7. Plug lights in

To Remove

- 1. Unplug all lights, wait for them to cool approximately 5 minutes.
- 2. Squeeze the BCL Light base clip (B) and lift away from the vertical scissor bar (A)
- 3. Release your squeeze on the BCL Light base clip (B)
- 4. Return lights to packaging