


## Brandcusi™ **Setup Instructions**



1. Take the aluminum pipes 2. If you have shelves make out and assemble, they are all corded.

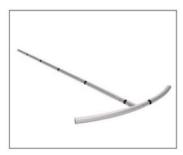

sure that you attach the support socket on the uni-pole.



3. Fit the uni-pole to the base by sliding it on.

NOTE: If your graphic is not connected to the base, line up the side hems with the sides of the base. Then push the sillicone edges into the groove around the perimeter fully.



4. Now lift the fabric print to the top, tilting the stand towards you will make it easy.




5.Stretch the fabric over the sides without putting lots of tension over the zipper.



6. Zip up the print on both sides only half way.

## Note:

If it is the staight modle make profile shorter before lifting the frabric, pull the frame out after you zip it half way.

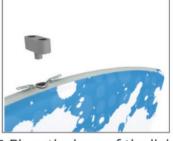

7. Place the base of the light fitting in the hole in the middle of the profile.



8. Fit both light on and run the electric cords inside the print, now pull zipper to the end.



9. Slide shelve through the open slit in the print and fit it on the support socket.



10. Same for the catalog holder.

