
## WLM-ATLANTIC C – Curved Header

(<del>1</del>6)



## Setup Instructions

- 1. Take all the parts out of the bags and lay them on the ground
- spring pop up on place. 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking
- the printed fabric. Feed the fabric from the round edges of the frame, 4. Its time to get your hands cleaned as now you are ready to handle the bottom, now close the Zipper. feed only a few feet, then stand the frame up then slide the fabric to
- 5. You can set up the feet in the position that you want to erect the
- they are designed tight so they lock well.
- clear plastic clips.

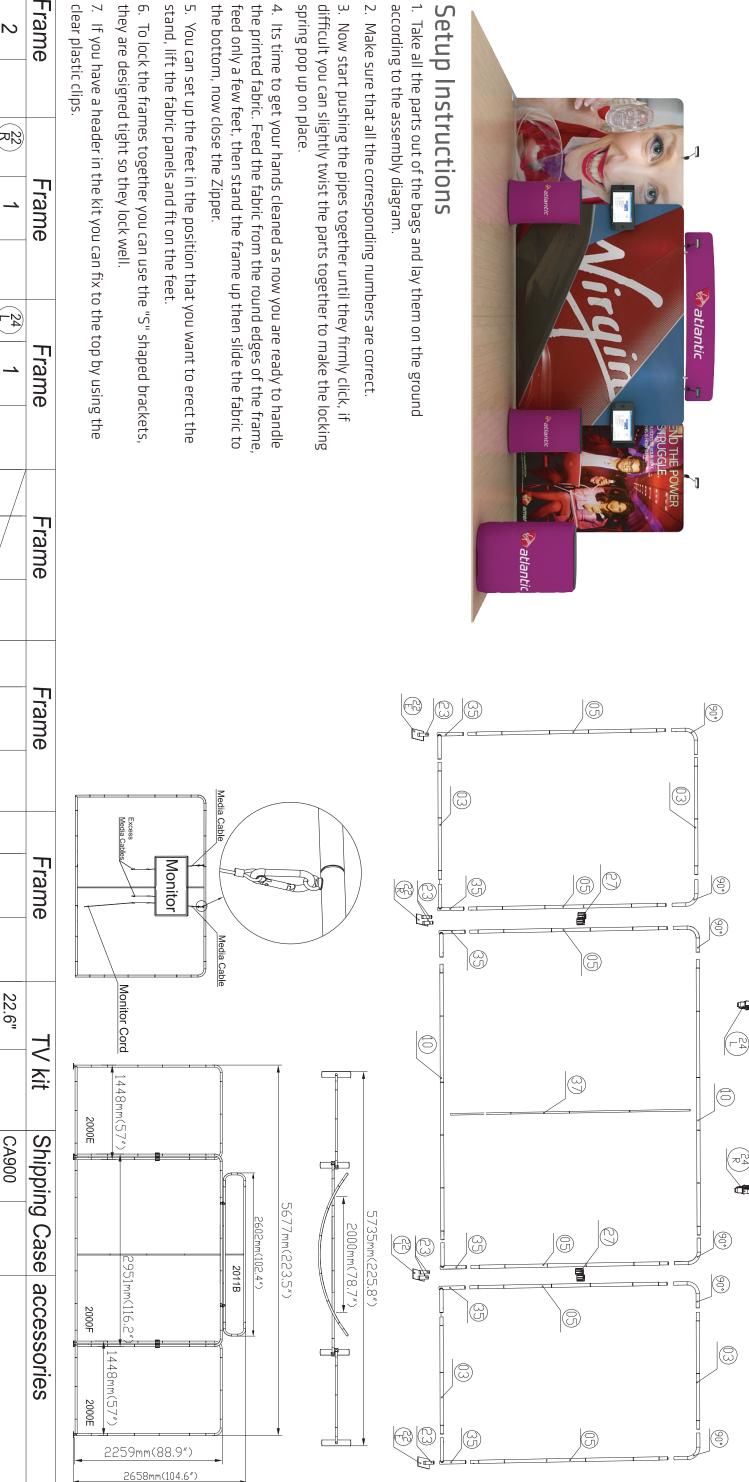

03 4	05)	10	23	27)	
4					
	6	2	6	2	Frame
35	37	(22) (E2)	(22)	(22) R2	
6		2	1		Frame
90°	17)	34)	16	(24) L	
6	2	1	2	1	Frame
(24) R					
1					-rame
			/		Frame
	/				O
					Frame
		40"	32"	22.6"	_
					TV kit
			CA500	CA900	Shipp
					ing Case
					Shipping Case accessories
	6 900 6	6 90° 6	2   34)   1   —	1 (16) 2   2 (34) 1   34 1   1 (17) 2   2 (24)   40"	1 (2 <sup>4</sup> ) 1 22.6"   1 (16) 2 34) 1 32"   2 (34) 1 40"   3 (17) 2 40"   6 (90°) 6 (24) 1 40"