

WLM-SCALLOP B



Setup Instructions

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.

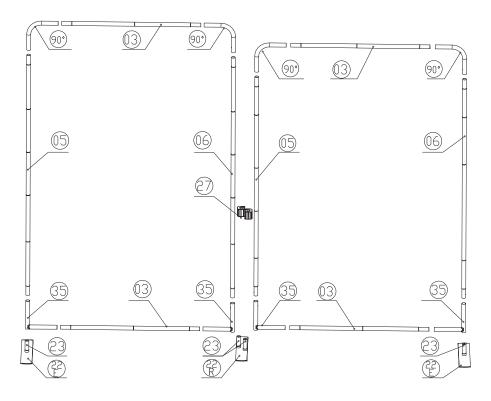

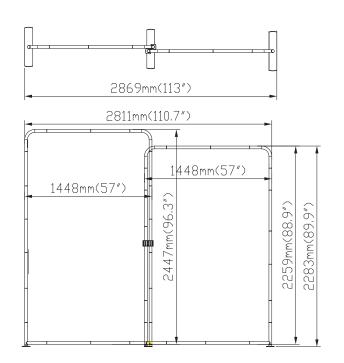

	Frame	Э	Frame		Fr	Frame		Frame			Frame				Frame		T	V kit	Shipping Case		accessories
90°	4	23	4														22.6"		CA900		2000A*2+2000F*1
35	4	06	2														32"		CA500		
27)	1	05	2														40"				
(22) R	1	03	4																		
(22) E	2																				
NO.	Quantity	Confirm NO.	Quantity	Confirm N	IO. Qu	uantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO	Quantity	Confirm	NO.	Confirm	NO.	Confirm	