


## NOTES

Flat side of saddle bracket attaches to header frame.  
Secure it to the horizontal, right next to leg with the long pin.

Box frame attaches between bracket and header frame

Attach 3' flats, at bottom, with shackles provided

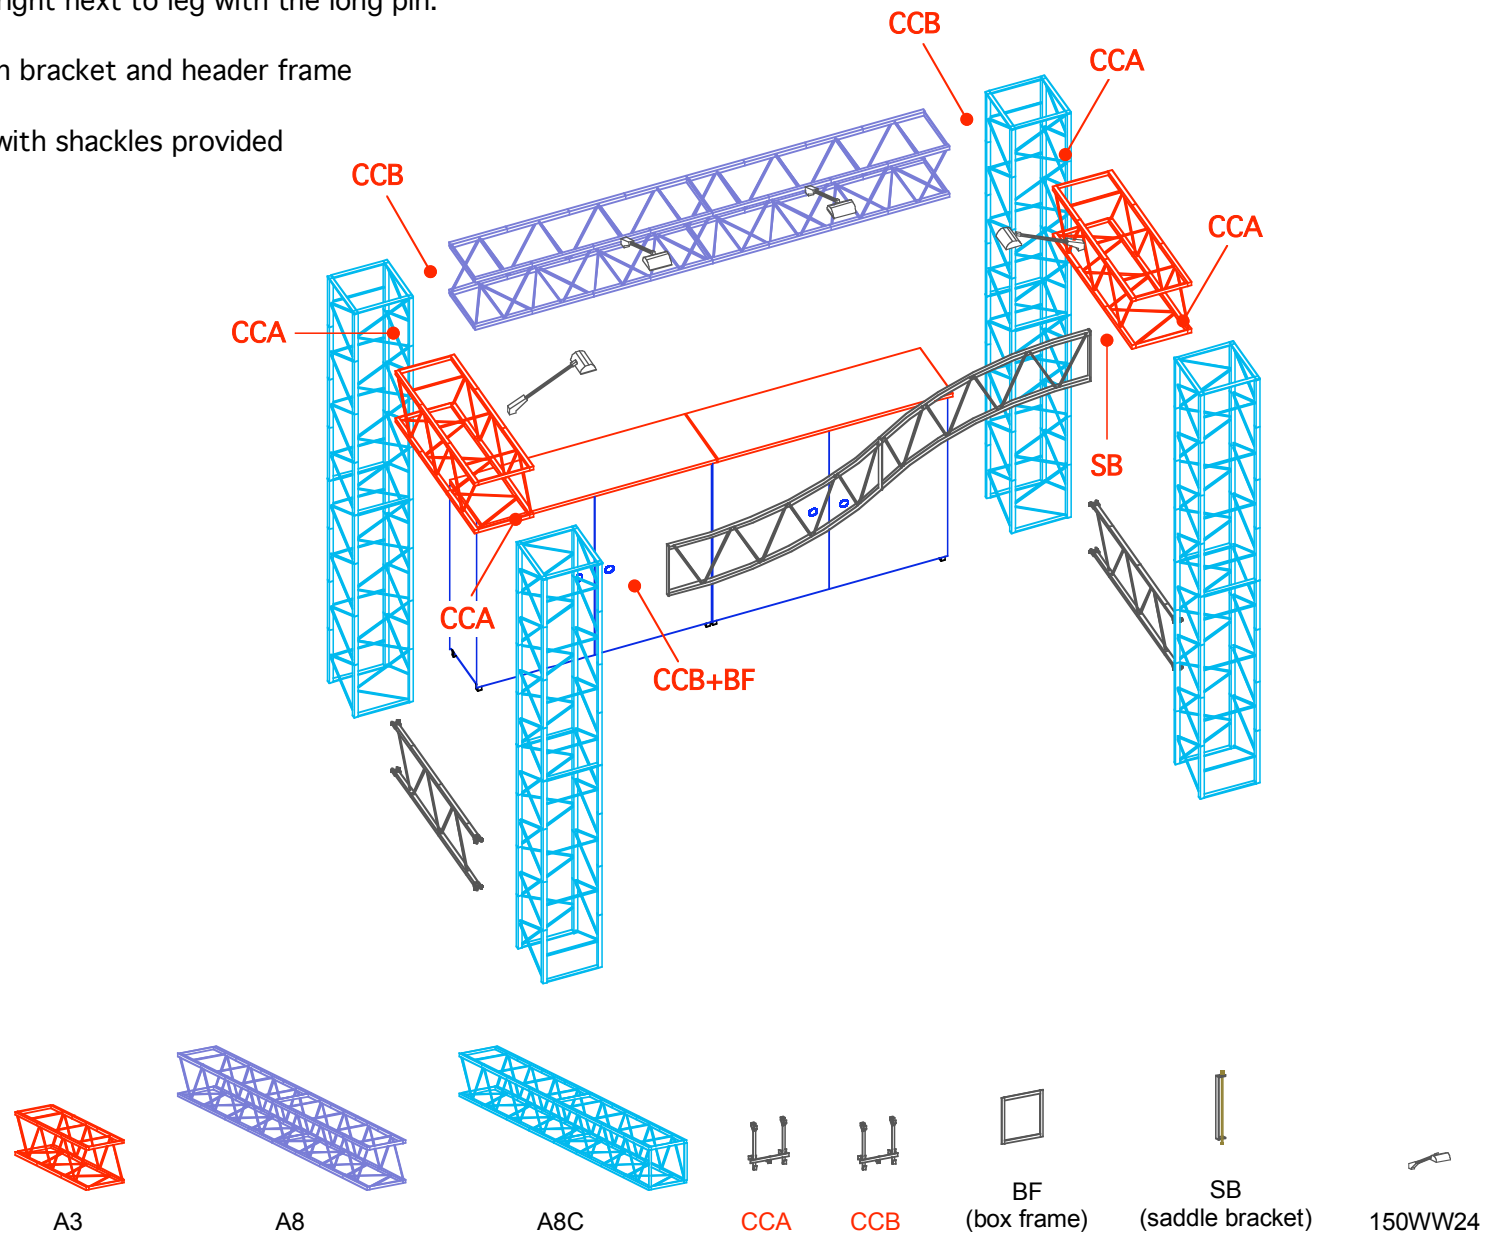

DRAWN BY: NG

**DESIGN : EZ12 ONYX ASSEMBLY**

**DATE: 5/08**

**REFERENCE: 10x10**

**© Trussworks 2008**

The designs shown herein are the proprietary property of Trussworks and protected by copyright and other laws. This document is to be maintained in confidence. No portion of the information or design shown herein may be reproduced, electronically or otherwise, nor may any display be made from this design without written consent from Trussworks.