
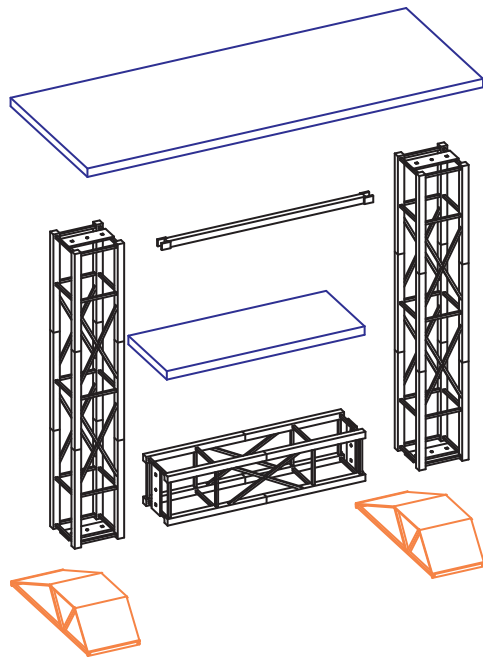


## Construction Detail

### EZ6 Designer Reception Counter

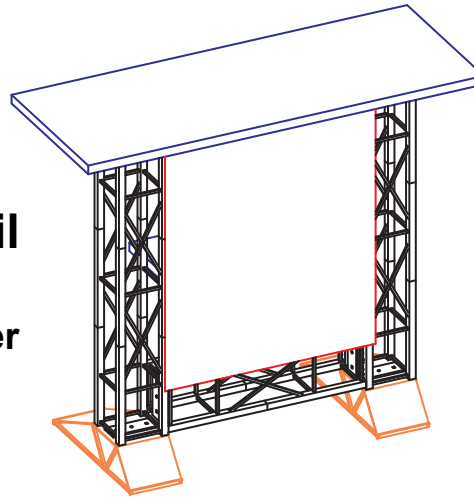

1. Bolt 2-A3 pieces to the EZ6 Designer Feet using two carriage bolts with wingnuts for each.
2. Stand them up and install the A2 between them, at the bottom, using a corner bracket on each end.
3. Attach the counter top using the supplied brackets and wingnuts.
4. Insert seambar between legs, at the front, 1/2" below the top of leg (just under the webbing.)

Install the shelf bracket on the middle horizontal webbing, and place the shelf on.

5. Apply 28.5"H x 24.5"W flexible graphic, using magnet strip on the reverse perimeter.



DRAWN BY: NG

**DESIGN : NEW EZ6 DESIGNER COUNTER**

**DATE:** 4/15/08

© Trussworks 2008

The designs shown herein are the proprietary property of Trussworks and protected by copyright and other laws. This document is to be maintained in confidence. No portion of the information or design shown herein may be reproduced, electronically or otherwise, nor may any display be made from this design without written consent from Trussworks.